


Otter®

Instructions for Hub Accessories: Shelf, Cup Holder Dual Rod Holder, Rattle Reel



1. Set shelter up. Loosen nut on the outside of the hub eyebolt and thread it outward as far as it will go. Then thread the hub eyebolt inward until it is tight against the shelter.



2. Go inside the shelter and remove the nut on the end of the hub eyebolt and place star washer onto the bolt.

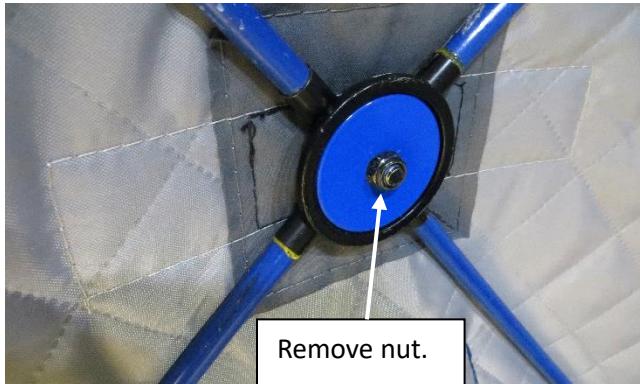

3. Place attachment block onto the eyebolt, the two screw holes should be on the bottom half. Turn the nut onto the eyebolt 2-3 threads (placing the nut into a shallow socket will make it easier). Thread the two adjustment screws into the block until they contact the hub plate. Securely tighten the hub nut. The two adjustment screws will help to keep the block in a more vertical position. Adjust screws as necessary, this will require the center nut to be loosened.

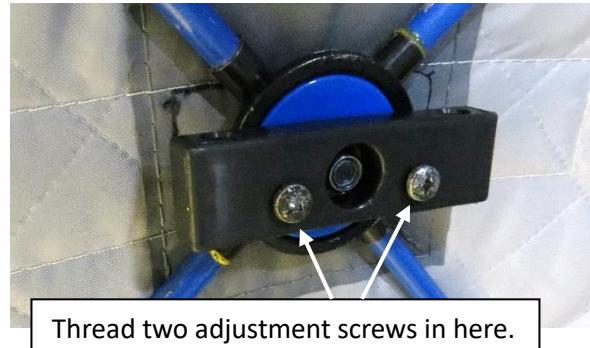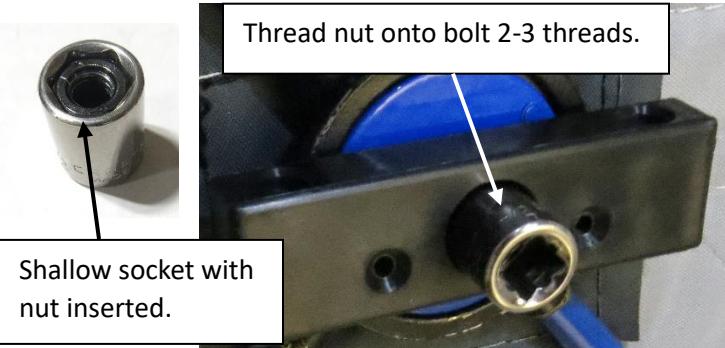

4. Attach accessories by inserting the steel rods into the holes in the top of the block.

Note: The blocks can remain attached to the hub when done fishing and the tent is packed up. They do not interfere with the tent during or after it is packed up.

